


FRONT DOOR BELT MOULDING

COMPONENTS

ET

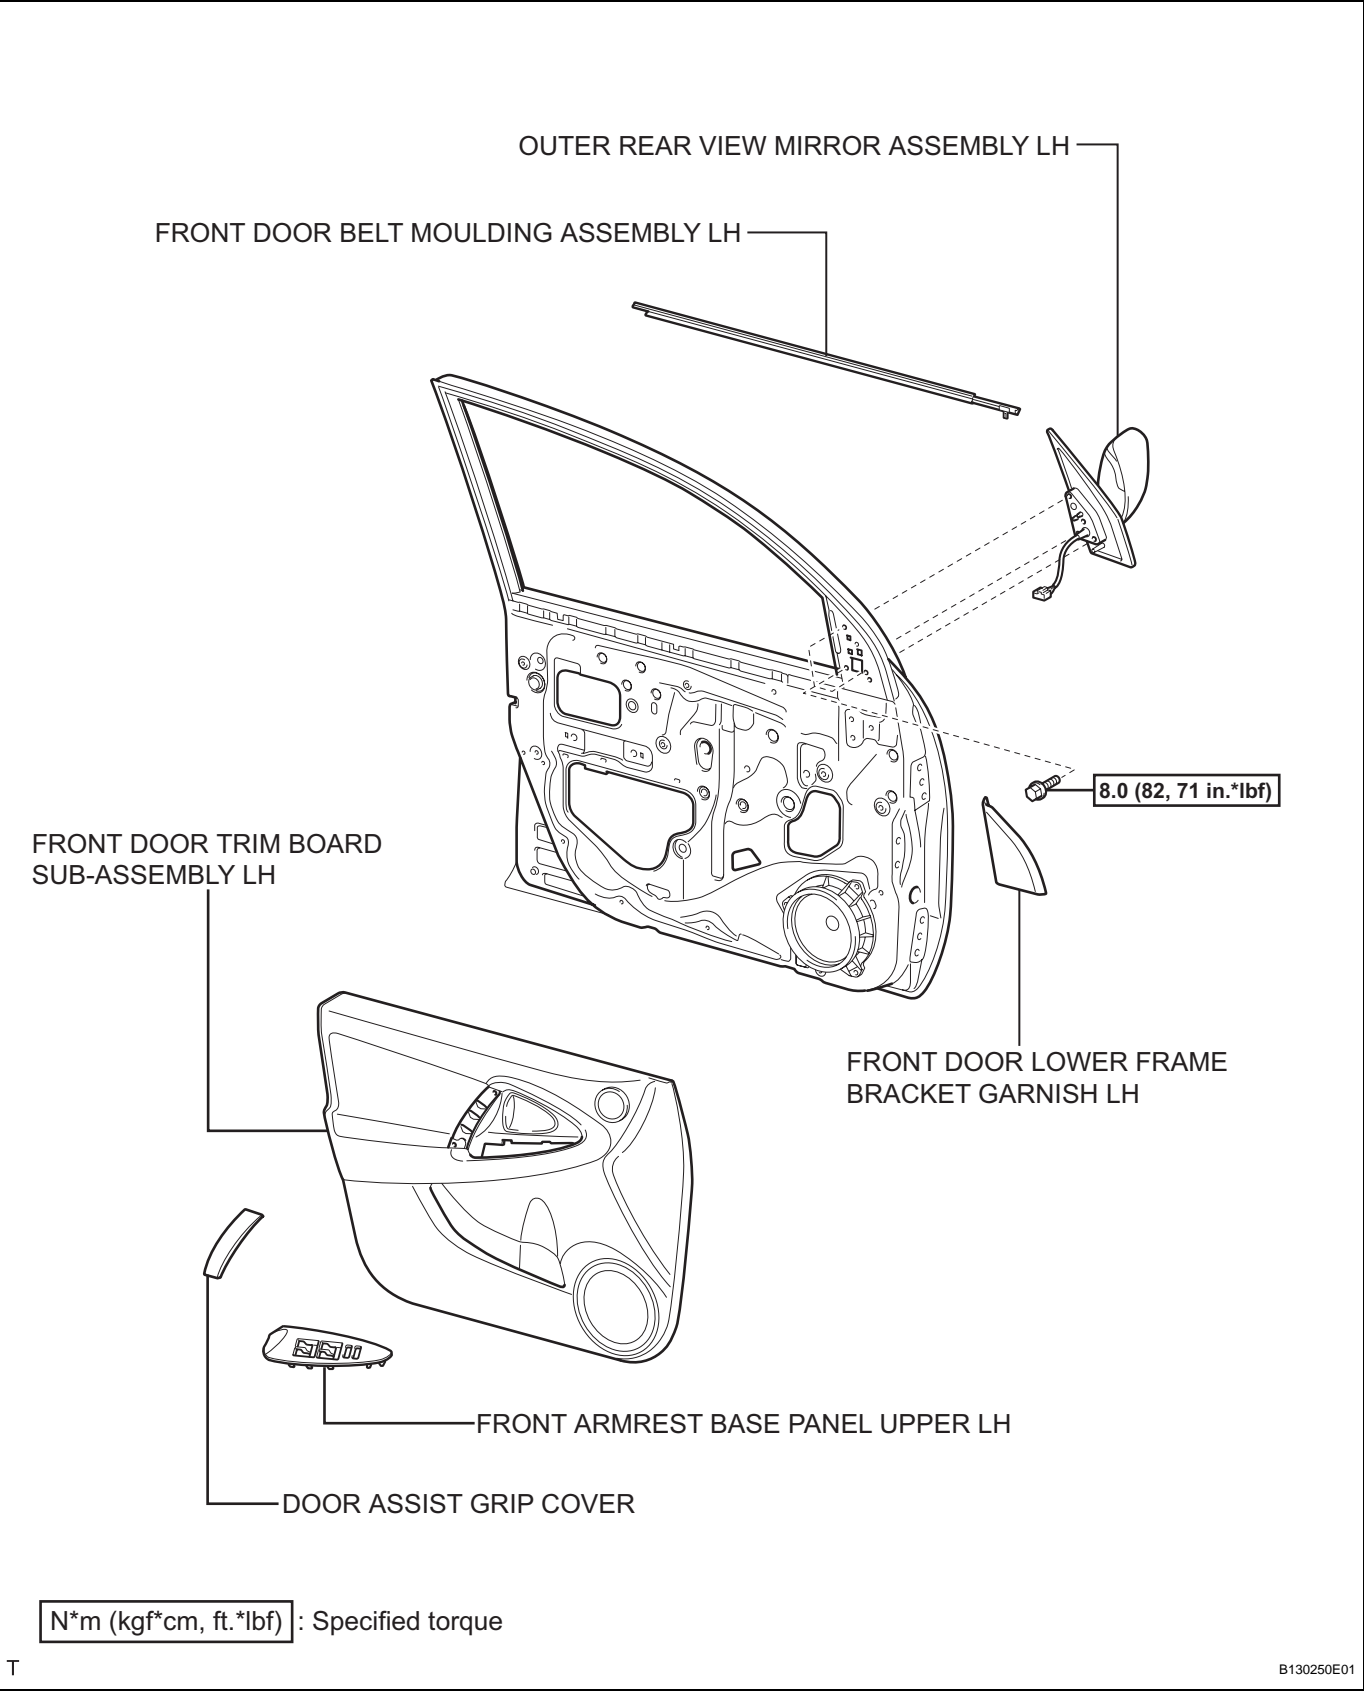

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-19](#))

3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page [ED-19](#))

4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-20](#))

5. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-8](#))

6. REMOVE FRONT DOOR BELT MOULDING ASSEMBLY LH


- (a) Put protective tape under the belt moulding.
- (b) Using a moulding remover, detach the claws to remove the belt moulding as shown in the illustration.

HINT:

Tape the remover tip before use.

NOTICE:

Be careful when removing the belt moulding as there are claws attached to the front and rear ends of the belt moulding.

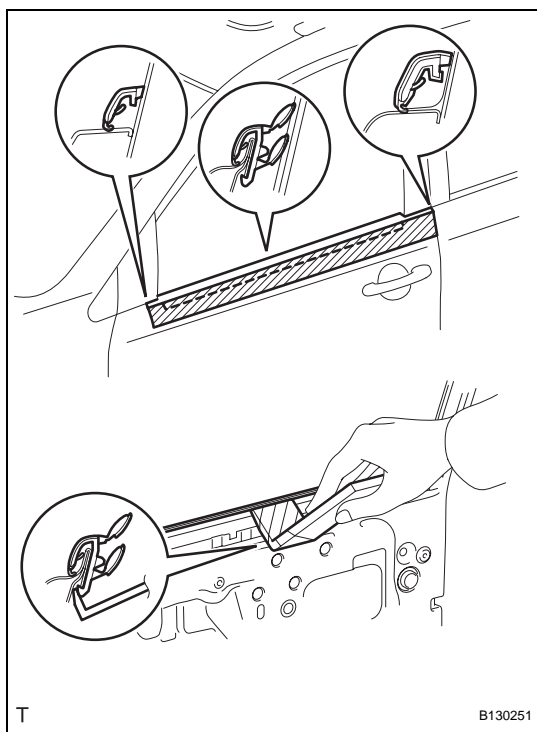

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL FRONT DOOR BELT MOULDING ASSEMBLY LH

- (a) Attach the claws to install the belt moulding.

HINT:

Confirm that the moulding is firmly installed.

2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-12](#))

3. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-33](#))

4. INSTALL FRONT ARMREST BASE PANEL UPPER LH (See page [ED-34](#))

5. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-35](#))

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

